

Memory Lab

Epson V800 Scanner Instructions



Step 1:

The Epson V800 photo scanner is designed to scan photos of irregular shape, thickness, or material that cannot be scanned via the Epson FastFoto scanner. The V800 will also scan at a much higher resolution.


Start by pressing the power button on the scanner which is located on the bottom left corner.



Step 2:

Open the lid and place the photo to be scanned at the upper right corner of the flatbed glass. The photo must be facing down.

Close the lid and press and hold the green marked scan button on the front-left of the scanner.

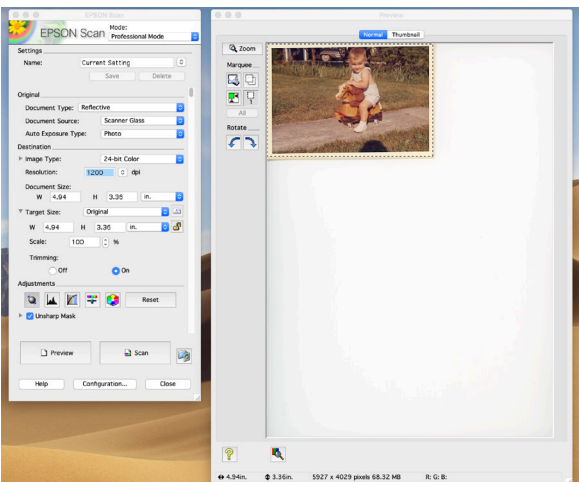

Step 3:

After pressing the scan button, the Epson Scan software will load on the computer.

Click the "Preview" button to see a preview on the viewer on the right side. Adjust the area to be scanned by clicking on the dotted box.

Then click on the "Scan" button to start the scanning. The file will be saved in a folder on the desktop of the computer called "v800."

After finishing scanning, please ask at the circulation desk for help with file transfer.